

Reference Guide



Main Unit

ApeosPro C810


ApeosPro C750

ApeosPro C650

1 Preface

A guide describing the basic operations, maintenance and precautions for use of the main unit.

- This manual may not be edited, modified or copied in whole or part without the written consent of the publisher.
- Some parts of this manual are subject to change without prior notice.
- The screen shots and the illustrations in this manual are used as examples. They may differ from yours depending on the model, the software, or the OS.

- In this manual, safety instructions are preceded by the symbol . Always read and follow the instructions before performing the required procedures.
- As the copying device contains a feature designed to prevent forging of certain documents, there may be rare instances where copies or scanned images do not achieve the desired results.
- If a malfunction occurs with the machine's storage media, any received or stored data including registered configurations may be lost. Our company is not responsible for any direct or indirect damages arising from or caused by such data loss.
- Our company is not responsible for any breakdown of machines due to infection of computer virus or computer hacking.
- Before sending a Fax, check to make sure the recipients are the correct, intended recipients.
- When you use a reflective projector to project transparencies printed in color onto a screen, the projected images may appear darker. This problem can be resolved by using a projector with higher brightness levels.
- The printed image may fade or peel off due to moisture caused by water, rain or vapor. For more information, contact your local representative.

Trademark

Microsoft, Active Directory, Azure, Excel, Internet Explorer, Outlook, Windows, Windows Server, and Wingdings are registered trademarks of US Microsoft Corporation in the U.S. and other countries.

Adobe, Acrobat, PostScript, PostScript 3, and PostScript logo are trademarks or registered trademarks of Adobe in the United States and other countries.

Apple, App Store, Bonjour, iBeacon, iPad, iPhone, Mac, macOS, and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

This product uses eT-Kernel. eT-Kernel is a trademark of eSOL Co., Ltd. in Japan and other countries.

Other company names or product names are registered trademarks or trademarks of each company.




FUJIFILM and FUJIFILM logo are registered trademarks or trademarks of FUJIFILM Corporation.

ApeosPro, ApeosWare, DocuWorks, PaperSecurity, Smart WelcomEyes and TrustMarkingBasic are registered trademarks or trademarks of FUJIFILM Business Innovation Corp.

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

Notations in Manual

The following symbols are used in this manual.



-  **Important** Indicates important information you have to know or be reminded before operations.
-  **Note** Indicates supplemental information useful for operations.
-  **Refer** Indicates reference destinations.
- “ ” Names and inputs of folders, files, apps, and functions. Also reference pages of the manual.

< > Keys of the keyboard, buttons and lamps of the optional units.

[] Tab names, item names, button names, menu names, and file names on the printer operation screen.

> The display order on the control panel. It is used as [Item name] > [Item name].

“ ” A manual to be referenced.
- “Long” paper is paper of which length is 488 mm or more.
 - There are two paper loading directions: LEF and SEF.
 - The width, length, front edge, rear edge, top edge, and bottom edge of paper indicate the following positions. (For the High Capacity Feeder and Paper Tray 5 (Bypass), the feeding direction is opposite.)

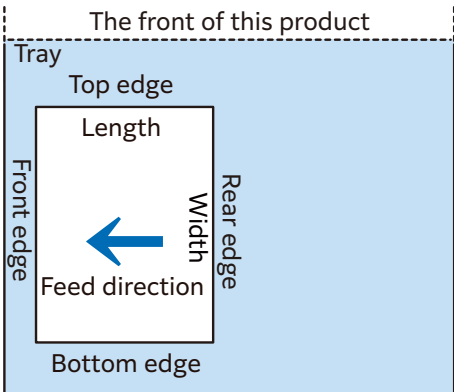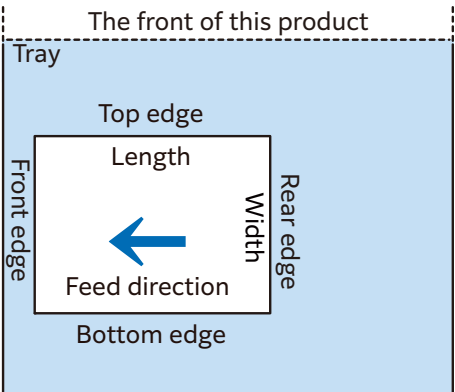
LEF Short side: Length, Long side: Width	SEF Long side: Length, Short side: Width
	

- Some functions mentioned in this manual may not be used according to the model and installed optional units.
- “WSD” stands for “Web Services on Devices”.
- “XPS” stands for “XML Paper Specification”.

2 Before Using the Machine

2.1 Device Components


Front

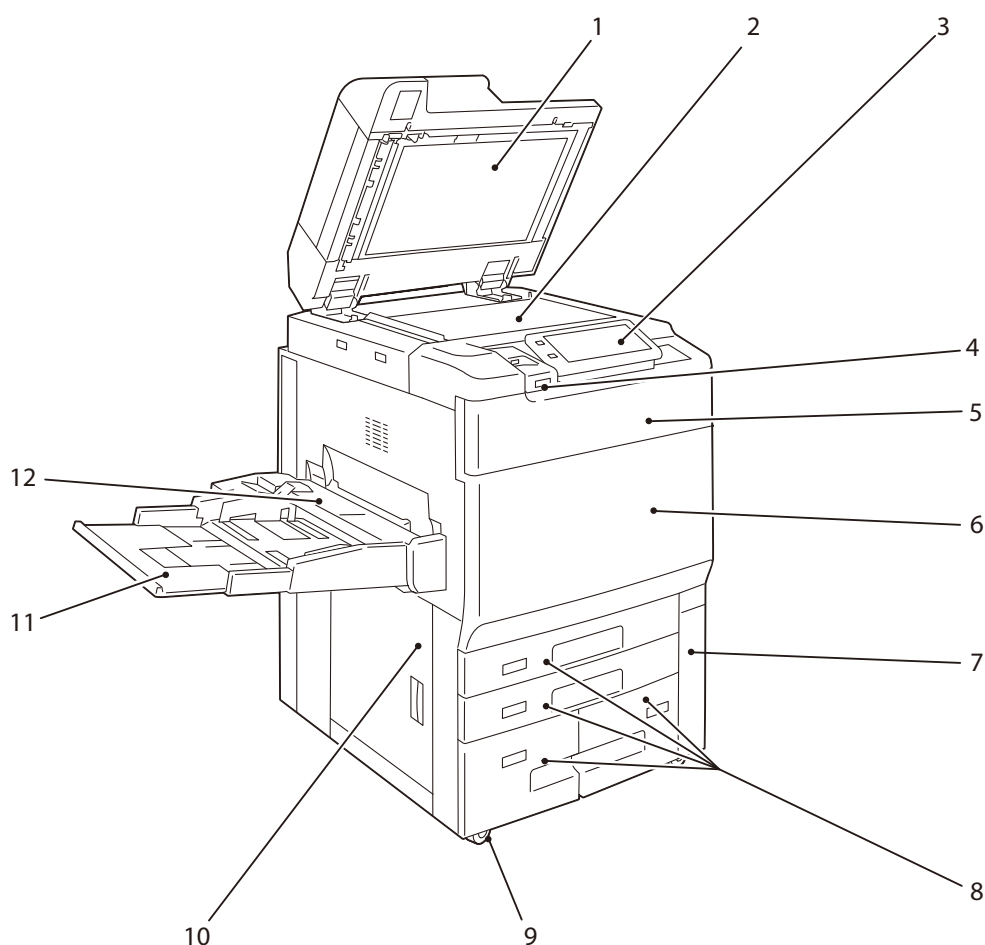

No.	Component	Function
1	Document Cover	Holds a document in place.
2	Document Glass	Load a document here.
3	Control Panel	Consists of operation buttons, LED indicators, and the Touch Panel Display.
4	Smart WelcomEyes(SWE) Motion Sensor	Exits the Power Saver Mode when the machine detects user presence.
5	Toner Cover	Open this cover to replace toner.
6	Front Cover	Open this cover to clear paper jams or replace the consumables.

No.	Component	Function
7	Waste Toner Container Cover	Open this cover to replace the Waste Toner Container.
8	Paper Trays 1, 2, 3, 4	Load paper here.
9	Locking casters	Used to move this machine.
10	Lower Left Cover	Open this cover to clear paper jams.
11	Paper Tray 5 (Bypass)	Used for loading non-standard paper that cannot be loaded in Trays 1, 2, 3, 4.
12	Paper Tray 5 (Bypass) Top Cover	Open this cover to clear paper jams.

Left Side and Rear

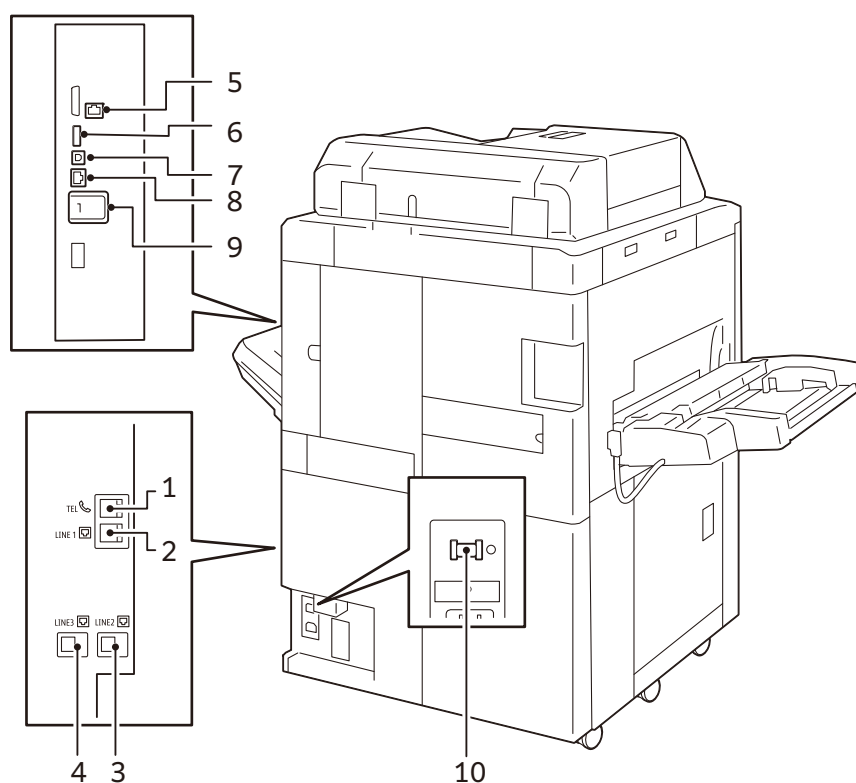

No.	Component	Function
1	Telephone line connectors (TEL)	Use "TEL" to call when using the telephone. Use "LINE 1" for calls using a handset connected to the TEL jack.
2	Telephone line connectors (LINE1)	
3	Telephone line connectors (LINE2)	
4	Telephone line connectors (LINE3)	
5	Network Port (optional)	Connects to a network cable.
6	USB 2.0 interface connector	Connects to a memory card reader, an optional component or a peripheral with a USB cable.
7	USB 3.0 interface connector	Connects to a USB cable for printing.
8	Network Port	Connects to a network cable.


No.	Component	Function
9	Wireless Network Kit (optional)	Used for connecting wireless network (Wi-Fi/Bluetooth) to the machine.
10	Reset button	Automatically switches the machine off when a current leakage is detected.

LAN connection

When connecting to the network port, keep the machine power switched off.




Note

When a connection failure occurs, it may be improved by setting [Disabled] in  > [Device] > [Network Settings] > [Protocol Settings] > [Ethernet Settings] > [Energy Efficient Ethernet] in the System Administrator mode.

USB connection

When connecting to a USB connector, keep the machine power switched off.

Inside

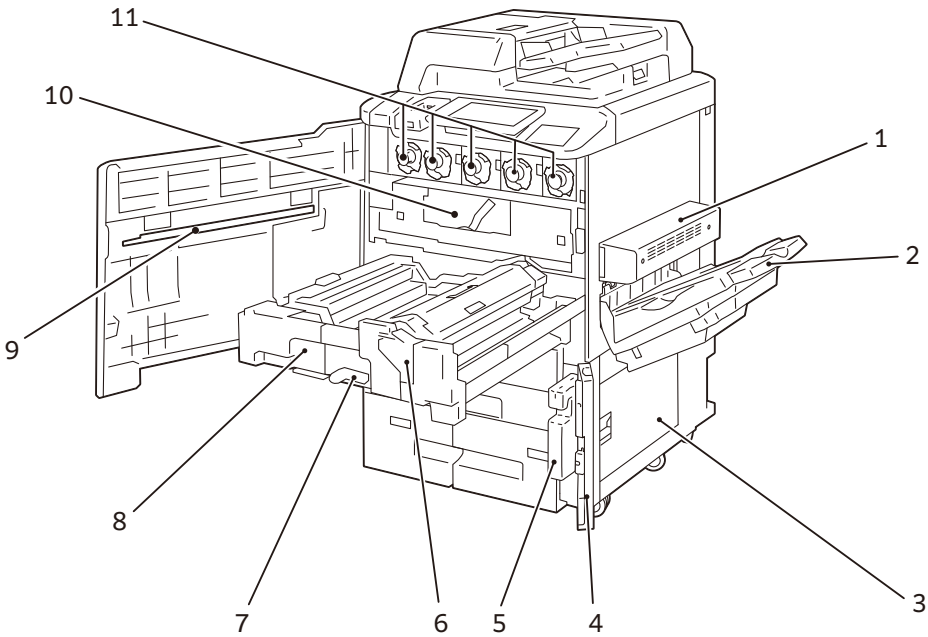




No.	Component	Function
1	Catch Tray Fan Kit (optional)	Device necessary to use the Offset Catch Tray or Simple Catch Tray.
2	Offset Catch Tray (optional)	Outputs are delivered here.
3	Lower Right Cover	Open this cover to clear paper jams.
4	Waste Toner Container Cover	Open this cover to replace the Waste Toner Container.
5	Waste Toner Container	Collects waste toner.
6	Fusing Unit	Fuses toner on paper.
7	Handle	Used to pull out the Transfer Unit.
8	Transfer Unit	Transfers toner images on the drum to paper.
9	Cleaning Bar	Clean the LED printheads.
10	Toner Conveyance Box	When replacing the Drum Cartridges or cleaning the LED printheads, remove this unit.
11	Toner Cartridge	Contains the toner (image forming powder).


Control Panel

6d Refer

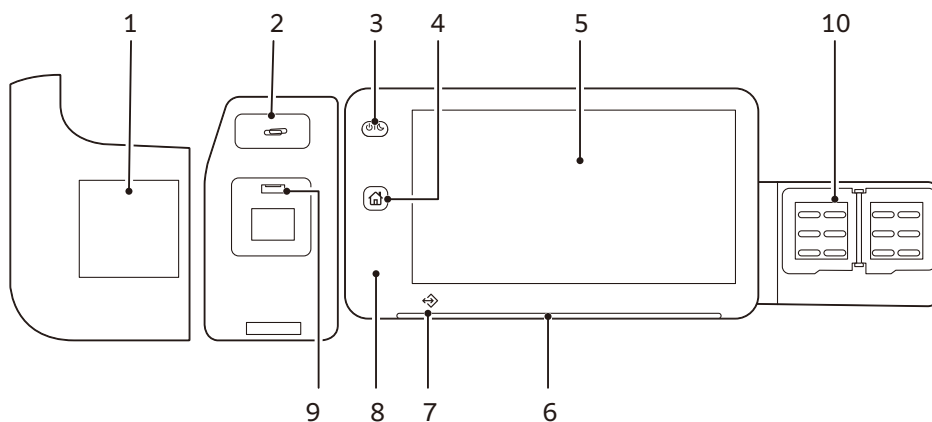For Control Panel, refer to the "Reference Guide - Operations".



No.	Component	Function
1	Built-in IC Card Reader (optional)	Used to authenticate a user using an IC card.
2	Paper Clip Tray	Used for placing paper clips and staples.
3	Power Button	<p>The power switches on.</p> <p> Note</p> <ul style="list-style-type: none"> • When "Please wait..." is displayed, the machine is warming up. The use of machine is not available during this time. • If the power does not switch on, confirm that the Reset button is in the reset position (button is pushed in) and the power plug is connected.
4	Home Button	<p>Pressing this button displays the Home screen.</p> <p> Note</p> <p>When the Home button is pressed, the settings of all applications in operation are reset.</p>
5	Touch Panel Display	Displays messages required for operation, and buttons for various features.
6	Status Display Indicator	The indicator lights up in green at an instant of operation reception. When an error occurs, the lamp blinks in orange.
7	Data Indicator	This indicator blinks while data is being sent from the machine or data is being received from the client computer. Also, this indicator lights up when documents are saved in the machine or the fax is stored in a local folder.
8	NFC touch area	This is an area for you to hold up your NFC-supported mobile devices over. To communicate interactively, the NFC function of this machine needs to be enabled.

No.	Component	Function
9	USB memory slot (optional)	Insert a USB memory device directly here.  Note A memory card reader or a USB memory device cannot be connected to the USB memory slot with a USB cable. Note that the machine will not recognize the memory on a memory card reader or a memory device connected to a USB interface connector on the rear side of the machine when a USB memory device is already inserted in the USB memory slot.
10	Fax One-touch Button (optional)	Allows you to specify a recipient with the simple press of a button. A recipient can be specified for [Fax], [Internet fax], [Email], and [Scan].

2.2 Print Area

Image Loss Width (mm)

There is an unprintable area (image loss area) along all four edges of the paper.

The image loss widths are 4.0 mm at the front edge, 4.0 mm at the rear edge, 3.0 mm at the top edge, and 3.0 mm at the bottom edge.

Guaranteed Print Area (mm)

The following are the areas for which the image quality is guaranteed.

A3 or smaller		Area excluding an image loss area along all four edges of the paper.
Larger than A3	Copying	Max: 297 x 432
	Printing	Max: 317 x 480

Standard Printable Area (mm)

A3 or smaller		Area excluding a margin (4.1 mm) along all four edges of the paper.
Larger than A3	Standard size	Max: 317 x 480
	Custom Size	Area excluding a margin (4.1 mm) along all four edges of the paper.
Long paper		Max: 323 x 1,292


Extended Printable Area (mm)

Changing the printable area settings enables you to print over a margin (4.1 mm) for the standard printable area.



A3 or smaller		Area excluding an image loss area along all four edges of the paper.
---------------	--	--

Larger than A3	Copying	Max: 297 x 432
	Printing	Max: 323 x 480
Long paper		Max: 323 x 1,292


Changing the extended printable area settings

1. Login to the System Administrator Mode.
2. Tap  > [Device] > [App Settings] > [Print Settings] > [Other Settings] > [Print Area] > [Extended].

You can change the settings from [Tray / Output] > [Edge Erase / Print Position] > [Margins] of the PCL printer driver.

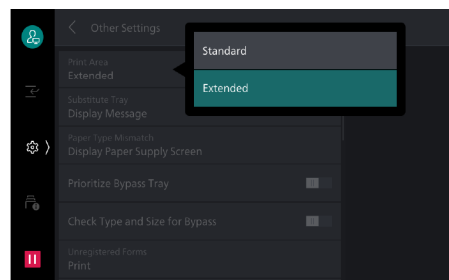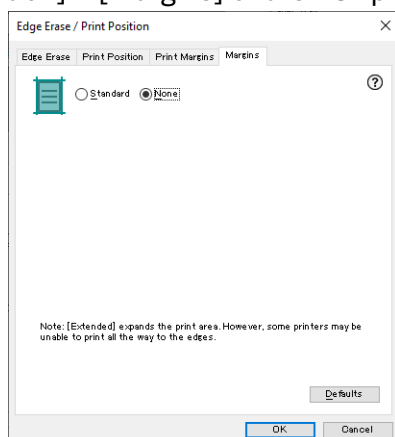

A3 size (297 x 420 mm)

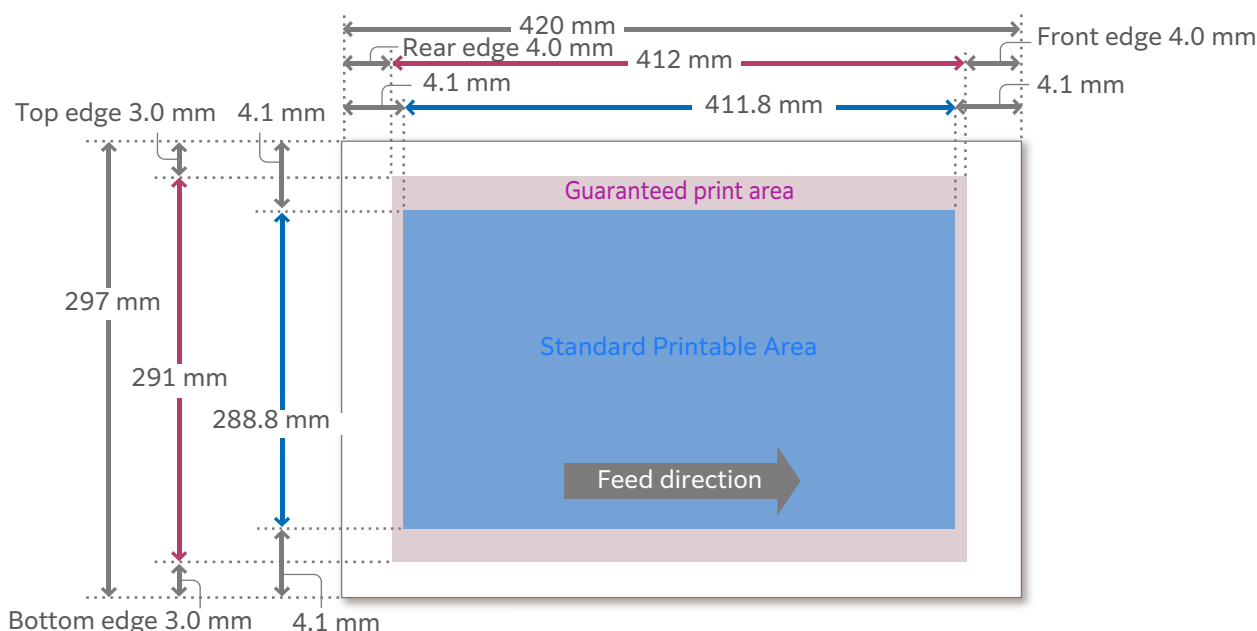

Note

- When the paper size is A3 or smaller, extended printable area = guaranteed print area.
- When the paper size is larger than A3, our company does not guarantee the image quality for the portion of the extended printable area that exceeds the guaranteed print area.

2.3 Paper

Recommended Paper

Standard paper

Paper name	Paper type setting for paper tray	Image quality guarantee	Paper weight (g/m ²)
C ² paper	Uncoated	Monochrome	70
J paper	Uncoated	Color	82

To use paper other than the above, contact your local representative.

Unusable paper

Avoid using the following paper to prevent machine malfunction.

- Paper using ink that deteriorates with fusing heat
- Ink jet printer paper
- Business card size paper
- Wrinkled or folded paper
- Damp paper, damp and wavy paper
- Paper with 12 mm or greater curl
- Thermal paper, heat-transfer paper
- Envelopes with windows

There are more types of unusable paper other than the above. For details, contact your local representative.

Usable paper types and paper weights

Paper Type		Paper weight (g/m ²)
Control Panel	Printer Driver	
Uncoated	Lightweight	52 to 63
	Plain	64 to 82
	Bond	83 to 105
	LW Card	106 to 176
	Cardstock	177 to 220
	HW Card	221 to 256
	X-HW Card	257 to 350
Recycled	Recycled	64 to 105
Uncoated Side 2	Plain Side 2	64 to 82
	Bond Side 2	83 to 105
	LW Card Side 2	106 to 176
	Card Side 2	177 to 220
	HW Card Side 2	221 to 256
	X-HW Card Side 2	257 to 350

Paper Type		Paper weight (g/m ²)
Control Panel	Printer Driver	
Hole Punched	Lightweight	52 to 63
	Plain	64 to 82
	Bond	83 to 105
	Punched LW Card	106 to 176
	Punched Card	177 to 220
	Punched HW Card	221 to 256
	Punched X-HW Card	257 to 350
Embossed	Light Embossed Card	106 to 176
	Embossed Cardstock	177 to 220
	Heavy Embossed Card	221 to 256
	X-HW Embossed Card	257 to 350
Coated	LW Glossy Card	106 to 150
	Glossy Cardstock	151 to 220
	HW Glossy Card	221 to 350
Coated Side 2	LW Glossy Card Side 2	106 to 150
	Glossy Card Side 2	151 to 220
	HW Glossy Card Side 2	221 to 350
Labels	Labels	106 to 176
	HW Labels	177 to 220
	X-HW Labels	221 to 300
Tab Stock	LW Tab Stock	106 to 176
	Tab Stock	177 to 220
	HW Tab Stock	221 to 256
	X-HW Tab Stock	257 to 300
Envelope	Envelope	64 to 150
Postcard	LW Card	106 to 176
	Cardstock	177 to 220

Storing and Handling Paper

Storing paper

Follow the guidelines below since paper is susceptible to moisture in the air and easily deformed by impacts.

- Store paper in a place of low humidity. Paper that has absorbed moisture can create paper jams or poor image quality.
- Using paper stored in a low-temperature environment may cause fusing failures. Storing paper in an environment where the temperature is 16°C or higher is recommended.
- Coated paper stored in a high-temperature, high-humidity environment may cause misfeeding or double-feeding.
- After opening a package of paper, seal and store the remaining paper in a moisture-proof wrapper or a reclosable plastic bag.
- To prevent bending or warping, store paper flat. Do not store it upright.
- Do not store paper under direct sunlight.

Handling paper

- Do not use collected pieces of paper.
- Do not use wrinkled or folded paper.
- Do not load paper of different sizes or types in the same tray.
- Before loading paper into the tray, fan a stack of paper well to prevent paper jams and double-feeding (multiple sheets of paper are being fed simultaneously) of transparency films, films and coated paper.

3 Basic Operations of the Machine

3.1 Loading Paper

After loading paper, configure the Paper Tray settings on the Home screen.



Important

Do not place paper or other objects in the reserved space of the tray. It may cause paper jams or machine malfunction.



Note

- While the printer is processing a job, do not remove the Paper Tray used for the job.
- Before loading the paper into the Paper Tray, fan a stack of paper well. This will separate the sheets, and it can prevent paper jamming.
- It is recommended to use our recommended papers. Print may not be done correctly according to the use conditions.



Refer

For details, refer to "Setup" in "Reference Guide - Operations".

Paper Trays 1, 2


The paper feeding method is the same for Paper Trays 1 (top tray) through 2 (second tray).

The bottom face of loaded paper is the surface printed on.


Loadable

Paper size (mm)	Standard size	Max A3, 11 x 17", Min A5
	Custom size	100 x 148 mm to 330 x 488 mm
Paper weight (g/m ²)	Single side printing	52 to 300
Maximum number of sheets (sheets) (80 g/m ² paper)		520 x 2 Trays


1. Pull out the Paper Tray until it stops.
2. When paper is already loaded in the tray, take out the paper.

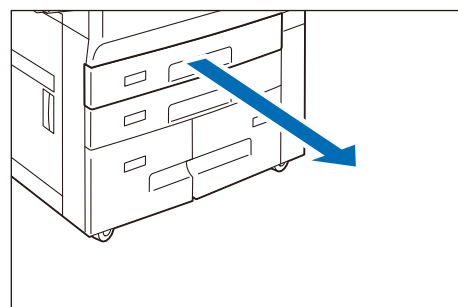

3. When loading paper whose size is JIS B4 or larger, pinch the knob and lift the paper rear end guide, and set the guide into the hole for the indicated size.

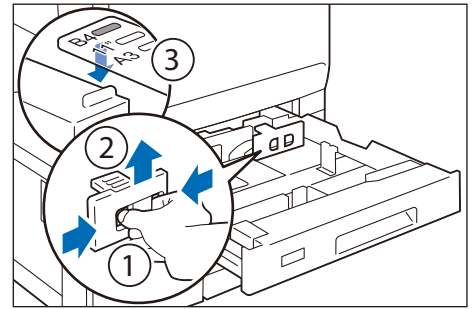

4. Pinch the two Guide Clips, and adjust to the correct paper size.

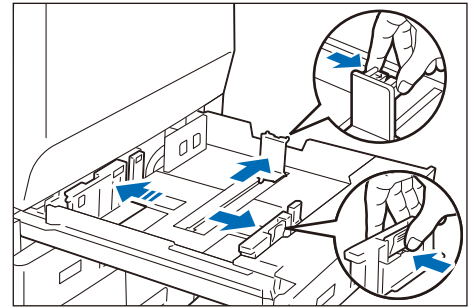

5. Fan a stack of paper, face the print surface down, and then load the paper with edges aligned according to the direction of the arrow.




Important

Do not load paper above the maximum fill line. It may cause paper jams or machine malfunction.



Note

Adjust the guide correctly to the paper size. If the guide is not adjusted correctly, the machine cannot feed the paper properly, resulting in paper jams.

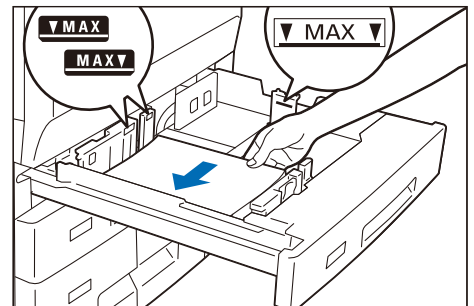

6. Push in the Paper Tray.

Setting special paper and other media

Hole punched paper

Paper orientation: Load paper with holes facing the left side when viewed from the front of the machine

Postcards

Paper orientation: SEF

Envelopes

Paper orientation when the flaps are open: Flaps come at the right when viewed from the front of the machine

Paper orientation when the flaps are closed: Flaps come at the left when viewed from the front of the machine



Note

Load envelopes with glue or seal as the flap is closed.


Paper Trays 3, 4

The paper feeding method is the same for Paper Trays 3 (left side) and 4 (right side).
The bottom face of loaded paper is the surface printed on.


Loadable paper

Paper size		JIS B5, A4, Letter
Paper weight (g/m ²)	Single side printing	52 to 300
Maximum number of sheets (sheets) (80 g/m ² paper)	Tray 3	840
	Tray 4	1,230

- 1. Pull out the Paper Tray until it stops.
- 2. When paper is already loaded in the tray, take out the paper.

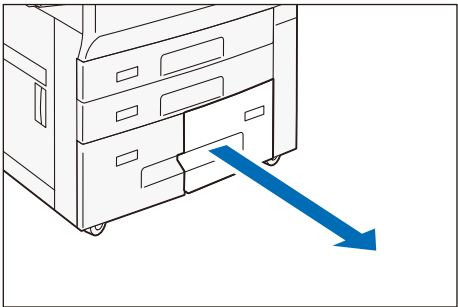

- 3. Pinch the guide clip, and adjust to the correct paper size.
- 4. Fan a stack of paper, face the print surface down, and then load the paper with edges aligned according to the direction of the arrow.

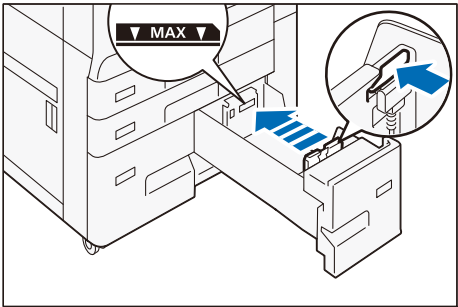

Important

Do not load paper above the maximum fill line. It may cause paper jams or machine malfunction.

Note

Adjust the guide correctly to the paper size. If the guide is not adjusted correctly, the machine cannot feed the paper properly, resulting in paper jams.

- 5. Push in the Paper Tray.

Setting special paper and other media

Hole punched paper

Paper orientation: Load paper with holes facing the left side when viewed from the front of the machine

Paper Tray 5 (Bypass)


The Paper Tray 5 (Bypass) allows you to use a variety of paper sizes and types that cannot be used in Paper Trays 1 to 4.

The top face of loaded paper is the surface printed on.

Loadable paper

Paper size (mm)	Standard size	Max A3, 11 x 17", Min A6
	Custom size	100 x 148 mm to 330 x 488 mm (long paper: more than 488 to 1,300)
Paper weight (g/m ²)	Single side printing	52 to 350 (long paper: 52 to 220)
Maximum number of sheets (sheets)(80 g/m ² paper)		250

1. Open the Paper Tray.

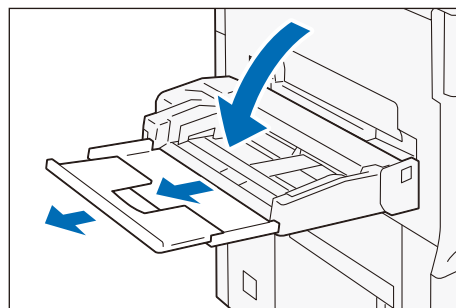


2. Fan a stack of paper, face the print surface up, and insert the paper gently along the Paper Guide until it stops.




Important

Do not set documents above the maximum fill line. It may cause paper jams or machine malfunction.

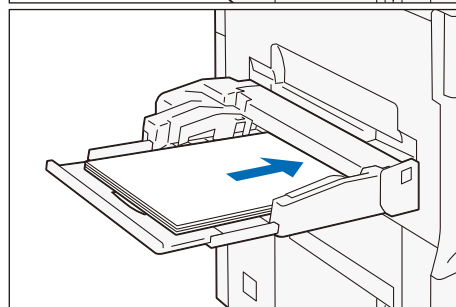

3. Pinch the lock to slide the Paper Guide to the correct paper size.

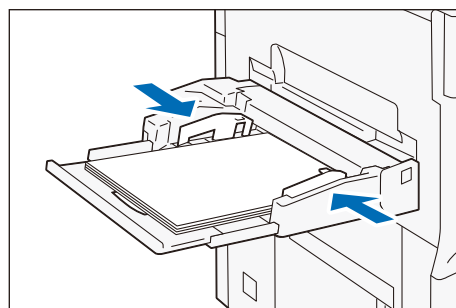

Setting special paper and other media

Hole punched paper

Paper orientation: Load paper with holes facing the right side when viewed from the front of the machine

Postcards

Paper orientation: SEF

Envelopes

Paper orientation when the flaps are open: Flaps come at the left when viewed from the front of the machine

Paper orientation when the flaps are closed: Flaps come at the right when viewed from the front of the machine



Note

- Load envelopes with glue or seal as the flap is closed.
- The loadable envelope size is up to 428 mm for the length.

Long paper

Load paper one sheet at a time.

Using an optional Long Paper Bypass Tray and Long Paper Inserter prevents skewed feeding and the paper from falling.



Refer

For loading paper on the Long Paper Bypass Tray, refer to "3 High Capacity Feeder B1-S/C3-DS" of "Reference Guide - Optional Units".


Load paper on the Long Paper Inserter according to the steps described below.




Note

Remove output paper one by one to prevent paper jam.


1. Open the Paper Tray.

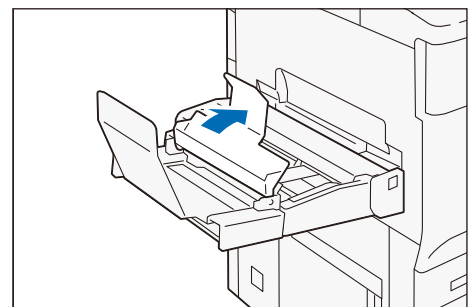


2. Face the print surface down, and insert the paper gently under the Paper Tray until it stops.

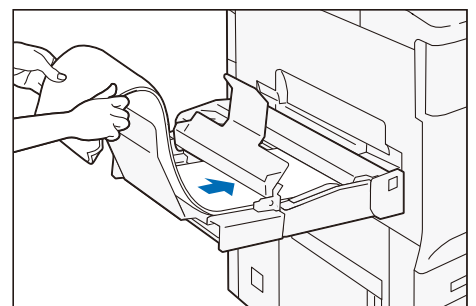

3. Insert the trail edge of the paper into the Paper Tray.

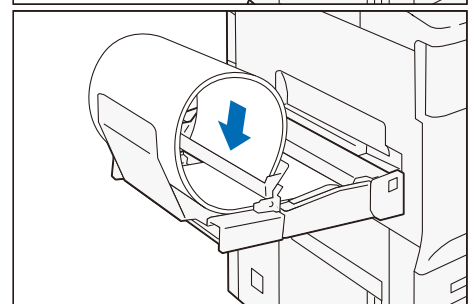

4. Adjust the Paper Guide to the correct paper size.

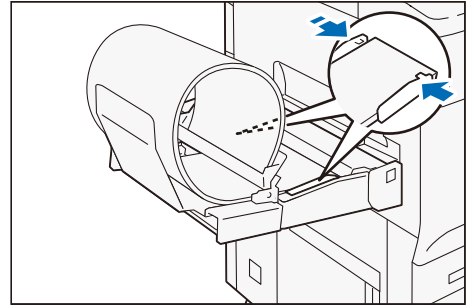

3.2 Loading Documents

Document Feeder

Loadable paper

Paper size	Max	A3, 11 x 17"
	Min	A6
	Custom size	84 x 140 mm to 297 x 432 mm
Paper weight (g/m ²)	Single side printing	38 to 200
	Double side printing	50 to 200
Maximum number of sheets (sheets) (80 g/m ² paper)		250



Note

When the Fax Kit is equipped, the loadable paper size is up to 600 mm for the length.




1. Open the Document Cover.
2. Wipe off any dirt adhering to the glass strip and white plastic area located in the left side of the Document Glass.
3. Close the Document Cover.
4. Confirm that the document is free of tag paper, adhesive tape, staples, and clips, and stretch out the document if it is wrinkled or folded.
5. Align the upper left corner of the document so that the original size is correctly detected.
6. Load the document face up (when the document is 2-sided, place the front side up) in the center of Document Feeder.



Important

Do not set documents above the maximum fill line. It may cause paper jams or machine malfunction.

7. When the confirmation indicator lights up, move the document guide to align with both edges of the document.

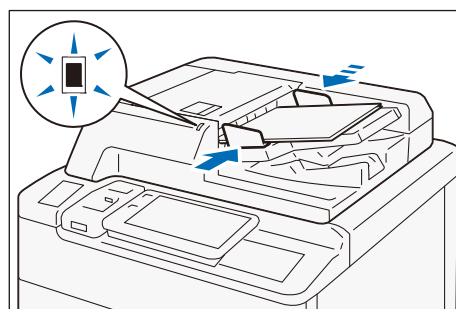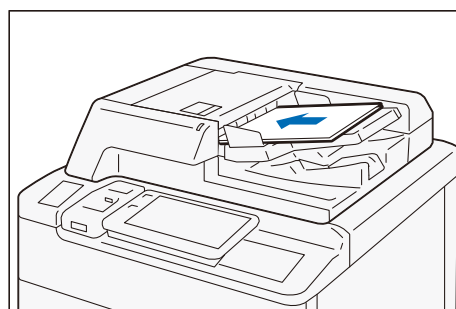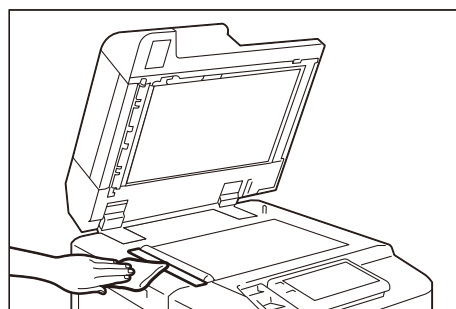


8. Open the Document Stopper.



Note

To prevent a document from being left behind, "Document Feeder Attention Light" is turned on after the Scan job is completed and turned off after approx. 3 sec.

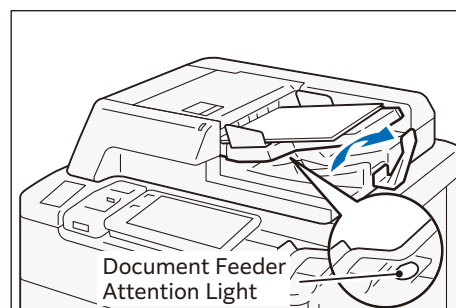


Document Glass

Loadable paper


Paper size (mm)	Width	Up to 297
	Length	Up to 432

1. Open the Document Cover, and wipe off any dirt from the Document Glass.

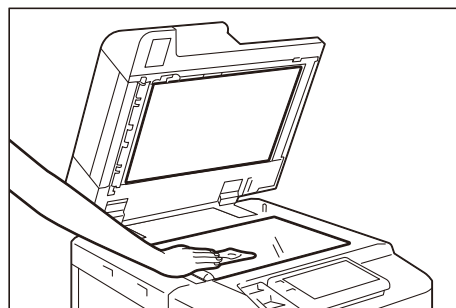

2. Load the document face down with the document aligned with the upper left corner of the Document Glass.

3. Close the Document Cover.

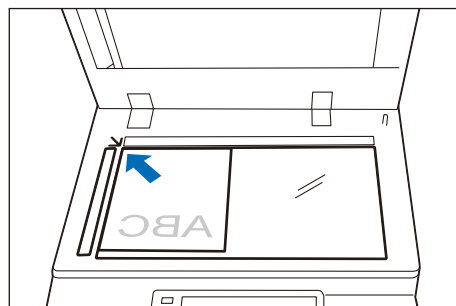

3.3 Outputting Paper

Print Surface

The print surface refers to the surface printed on in single-sided printing (the first page in double-sided printing).

Paper is output to the Output Tray with the print surface faced downward in the case of front side output, and with the print surface faced upward in the case of back side output.

		Single-sided printing (front side output)	Double-sided printing/ upside down output (back side output)
Paper size (mm)	Width	100 to 330	100 to 330
	Length	148 to 488	148 to 488
Paper Weight (g/m ²)		52 to 350	52 to 300

Long paper

		Single-sided printing	Double-sided printing
Paper size (mm)		More than 488 to 1,300	More than 488 to 762
Paper weight (g/m ²)	Uncoated	52 to 220	
	Coated	106 to 220	

Output Tray capacity

A4 paper

Simple Catch Tray	500 sheets
Long Catch Tray	300 sheets
Offset Catch Tray	500 sheets

Papers other than A4

Long Catch Tray	Paper size: Up to 488 mm	300 sheets
	Paper size: 489 to 728 mm	100 sheets
	Paper size: More than 728 mm	10 sheets



Important

When paper exceeding the tray capacity is loaded, the Extension Tray may get broken.



Note

- The tray capacity varies depending on the following conditions.
 - Paper size, paper weight
 - Paper types (coated paper or uncoated paper, paper curl height, etc.)
 - Single-sided prints / double-sided prints
 - Image density


Extension Tray

Insert 2 extension trays until they stop.



Note

Pass them through over the guide at the rear side of the tray until they stop.

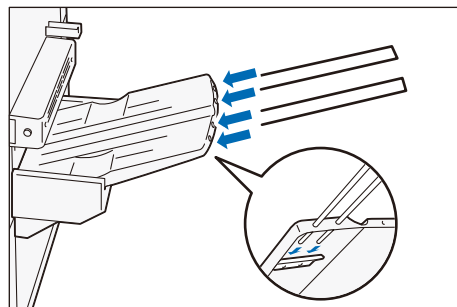

Thin paper loading wire

When it is difficult to load thin paper, install the wire.



Note


- The tray capacity is 10 sheets.
- Paper of which width is 256 mm or less cannot be used.
- The supported paper weights are from 82 to 127 g/m².

1. Install the wires on the extension tray.




Note

As holding the extension tray with a hand, insert the fixing devices firmly, and check that the wires will not come off from the extension tray.

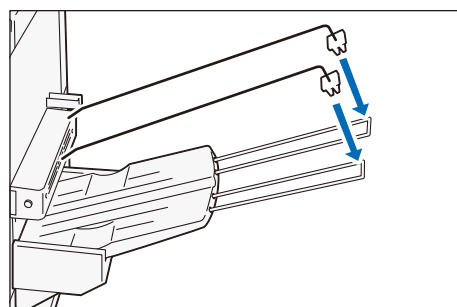


2. Adjust the wire positions as aligning the wires with the “▲” marks.

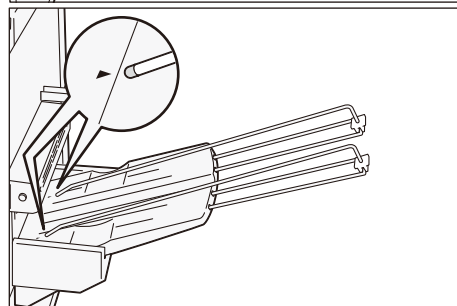

When not using the kit

Hang the kit on the holder at the side.

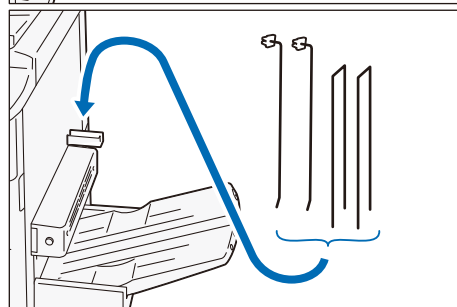

Offset

Note

This function is available only for the Offset Catch Tray. Offset cannot be performed on the simple catch tray and Long Catch Tray.

The paper is output with offset stacking for easy separation.





Use the printer driver to set the offset of outputs.

Paper size (mm)	Width	170 to 297
	Length	148 to 488
Paper weight (g/m ²)		52 to 350

Catch Tray Fan

The catch tray fan is equipped with a knob to adjust the airflow volume. Adjusting the airflow volume according to the paper volume to be output to the tray can prevent sheets from sticking each other.

Leave the scale to "0" when papers do not stick each other.

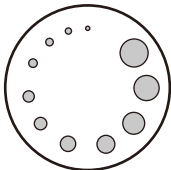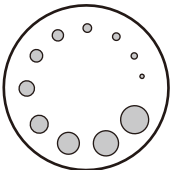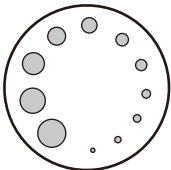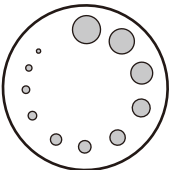Airflow volume	None	Low	Medium	High
Memory	0	3	6	10
Knob				

Airflow Setting

		Larger than A4	Smaller than A4			
Paper weight (g/m ²)		All	60 to 105	106 to 128	129 to 150	151 or greater
Memory	When paper amount is small	0	0	3	6	10
	When paper amount is large (100 sheets or more)	0	3	6	10	10

Note

- In high temperature environment or when a large volume of papers is output to the tray, papers are likely to stick each other. Increase the airflow volume by turning the knob to the right by 1 to 2 scales.
- When papers stick each other even if the airflow volume is increased, keep the number of papers on the Top Output Tray less than 50 sheets.
- Even if paper larger than A4 is used, when output papers heavily stick each other, set the airflow volume for A4 or smaller papers.

4 Maintenance

4.1 Consumables


Consumables recommended by our company are manufactured under the standards suitable for this machine. Using consumables not recommended by our company may affect print quality or performance provided by the product. Use consumables that our company recommends for this machine.

Consumable types
Toner Cartridge [K] (Black)
Toner Cartridge [C] (Cyan)
Toner Cartridge [M] (Magenta)
Toner Cartridge [Y] (Yellow)
Drum Cartridge (YMCK)
Waste Toner Container

Handling consumables


- Do not store boxes of consumables upright.
- Do not unpack consumables before use. Avoid storing consumables in the following locations:
 - In high temperature and humid locations
 - Near heat-generating devices
 - Areas exposed to direct sunlight
 - Dusty areas
- When using consumables, carefully read precautions for use instructed on their bodies or packages.
- We recommend keeping spare consumables in stock.
- To order consumables, have the product codes ready and contact your local representative.

Replacing consumables

To display the consumables progress, tap  > [Device Status] > [Supplies].

When the end of life for a consumable is reached, a message appears on the Touch Panel Display. Replace the consumable indicated in the message.

For the replacement method, refer to the steps provided on the box of the consumable.

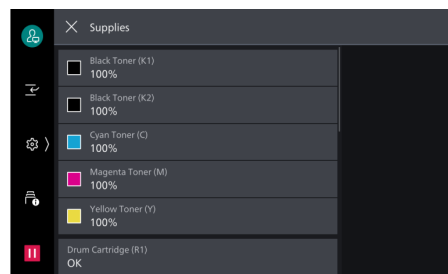

Note

- When replacing Toner Cartridges, conduct it while the machine is on.
- When replacing a toner cartridge or Waste Toner Container, toner may spill and soil the floor. We recommend laying a piece of paper or a sheet on the floor beforehand.
- Do not take out or shake the Waste Toner Container before it is filled up. Accurate detection can become no longer possible, and the toner may be spilled from the Waste Toner Container.

- When replacing the Waste Toner Container, toner may spill and soil the floor. We recommend laying a piece of paper or a sheet on the floor beforehand.
- A trouble with image quality results if the Drum Cartridge is placed under a direct sunlight or intense fluorescent light, or if the drum surface is touched and scratched.

4.2 Cleaning Main Unit

- When wiping the main unit with a wet cloth, use a soft, moistened and tightly-squeezed cloth. The main unit may break down if the moisture remains on it.
- Do not use chemicals such as benzine or thinner. Doing so may damage the paint or coating on plastic parts.

Outside the Main Unit

Exterior

1. Wipe the exterior with a soft, moistened, and tightly-squeezed cloth.

When stains cannot be removed easily, wipe them lightly with the soft cloth slightly moistened with a thin neutral detergent solution.

2. Wipe the moisture off with a dry soft cloth.

Touch Panel Display

Wipe lightly with a dry soft cloth.

When wiping the main unit with a wet cloth, wipe it lightly with a soft, moistened and tightly-squeezed cloth.



Important


Wiping the panel strongly may damage the panel. Wipe lightly.

LED Printhead

When you have replaced the Waste Toner Container or Drum Cartridge, clean the LED printheads in order to prevent density and color irregularities from occurring.

1. Confirm that the machine is not operating, and open the Front Cover.

2. Turn the handle of the Toner Conveyance Box to the left.

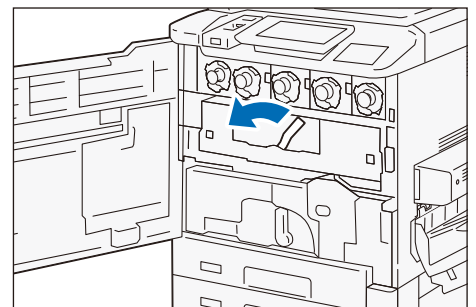

3. Push the knobs on both sides inward, pull out the Conveyance Box, and place it on the floor in the same orientation as it is installed in the machine.






Note

Place the removed Toner Conveyance Box against the machine with its inner side not facing down. If the Toner Conveyance Box falls down, it may stain the floor.

4. Slide out the cleaning bar from the back side of the Front Cover to clean each LED printhead.

Orient the cleaning bar with the arrow (↑) facing down, insert the cleaning bar until it stops, and then pull it out slowly. Clean each LED printhead by repeating the back and forth action two to three times.

5. Place the cleaning bar back to its original position in the back side of the Front Cover.
6. Return the Toner Conveyance Box to its original state and turn the handle to the right.
7. Close the Front Cover.

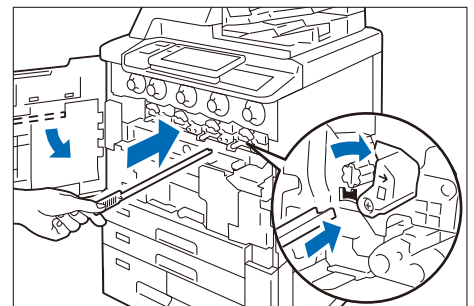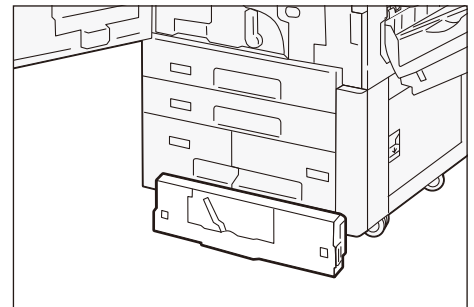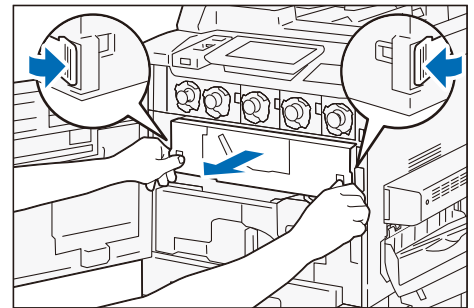

Scanner

Document cover, Document Glass, film, scanner glass

For the cleaning method, refer to the label on the main unit.


Wipe off any dirt with the supplied cloth about once a month.

When stains cannot be removed easily, wipe them lightly with the soft cloth slightly moistened with a thin neutral detergent solution.


Document Feeder rollers

Clean the Document Feeder rollers about once a month.

1. Pull up the front handle of the Top Cover of the Document Feeder, and open the cover until it stops.

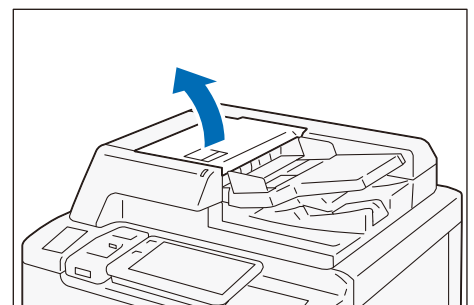

2. While turning the rollers, wipe them with a soft cloth slightly moistened with water.
3. Close the Top Cover of the Document Feeder and make sure that there is no gap on the front or rear of the cover.

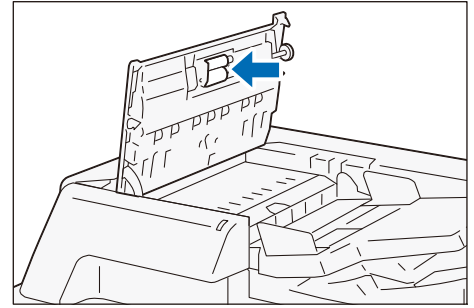

4.3 Paper Jams

If paper is jammed, the machine stops and an alarm sounds. Follow the instructions displayed on the screen to remove the jammed paper.

Gently remove the paper being careful not to tear it. If paper is torn while it is being removed from the machine, remove all the torn pieces making sure that none remain inside the machine.

When you have finished clearing the paper jam, printing is resumed from the state before the paper jam occurred. If a paper jam occurred during copying, tap on [Start]. Copying is resumed from the state before the paper jam occurred.

Note

- If a paper jam occurred, check the paper jam position before pulling out a Paper Tray.
- Clear the paper jams while the machine is on.
- Do not touch components inside the machine. This may cause print defects.

1) Remove the jammed paper.

Note

When the lead edge of the jammed paper protrudes toward the Top Output Tray, pull the paper downward to remove it.

Inside Lower Left Cover


1. Open the Lower Left Cover.

Note

When High Capacity Feeder B1 is installed, hold the handle and fully move the unit to the left.


2. Remove the jammed paper.

3. Close the Lower Left Cover.

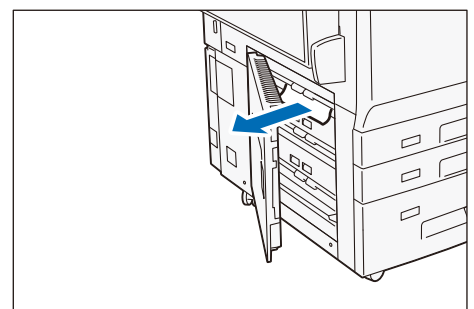

Right side

1. Open the Lower Right Cover.

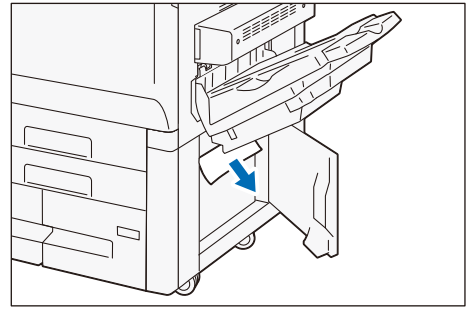

2. Remove the jammed paper.
3. Close the Lower Right Cover.

Exit


Depending on the optional units equipped in the right side of the machine, the method of paper removal differs.



Refer
For optional units, refer to "Reference Guide - Optional Units".


Paper Trays 1, 2

1. Pull out the Paper Tray where the paper jam occurred until it stops.

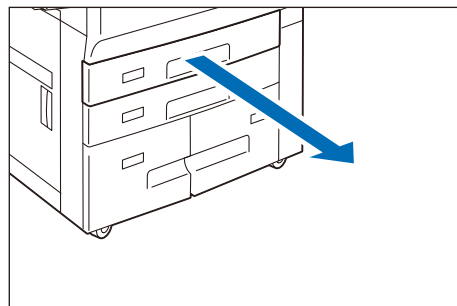


2. Remove the jammed paper.

3. Push in the Paper Tray.

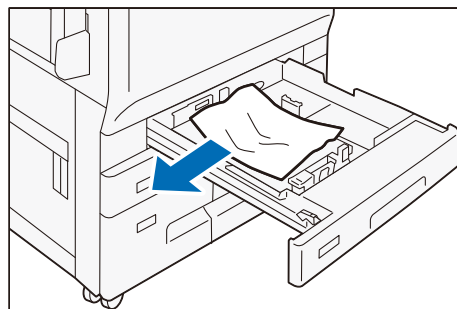


Paper Trays 3, 4

1. Pull out the Paper Tray where the paper jam occurred until it stops.

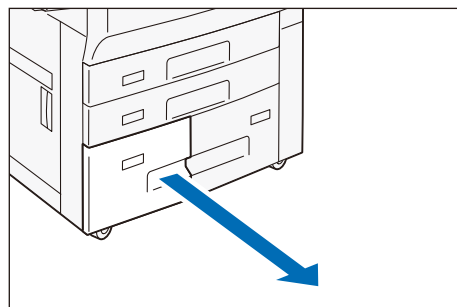


2. Remove the jammed paper.

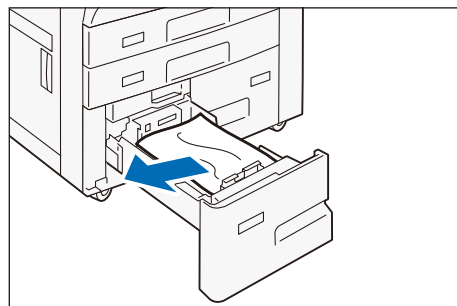

3. Pull out the Tray 3 and Tray 4.

4. Pull out the unit [C], then open the handle and remove the jammed paper.

5. Close the handle and push in the Paper Tray.

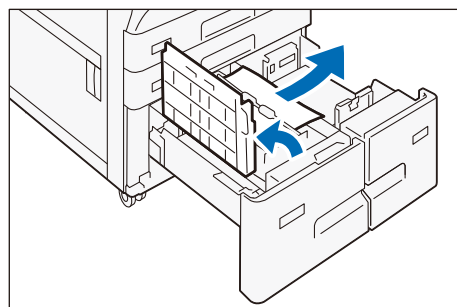


Paper Tray 5 (Bypass)

1. Remove the jammed paper.
When a message appears on the control panel to cut the paper, cut the base of paper without pulling the paper out, and then tap [Confirm].
2. Remove all the paper from the Paper Tray 5 (Bypass), and then load the paper again.







Note

If the paper is not visible, open the Paper Tray 5 (Bypass) Top Cover, and then remove the jammed paper.

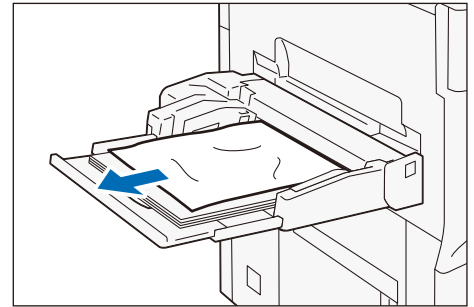


Duplex Automatic Document Feeder

1. Remove all documents from the Document Tray.
2. Pull up the front handle of the Top Cover and open the cover until it stops.
3. Open the Left Cover until it stops.
4. Remove the document.
5. If the document is caught in the entry, remove the jammed paper from the Left Cover.
6. If the document is caught in the exit area, lift the Document Feeder Tray and pull the document toward the exit.
7. Put the Document Feeder Tray back into position.
8. Close the Upper Cover.
9. Close the Left Cover.

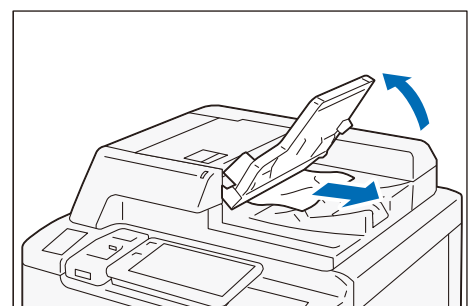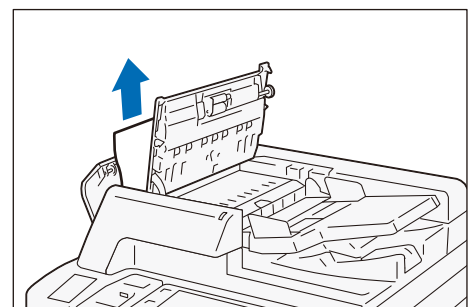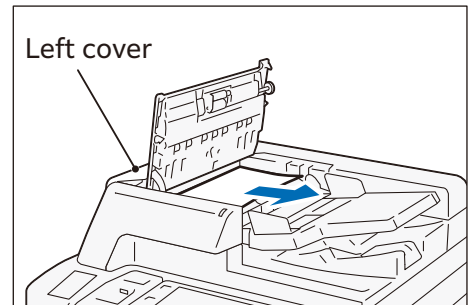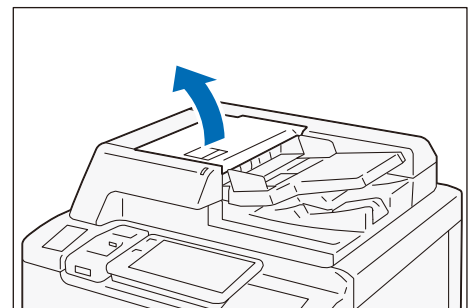

10. Open the Document Cover, pull down the handle to open the Side 2 scanner, and then remove the document.

11. Close the Side 2 scanner, then close the Document Cover.

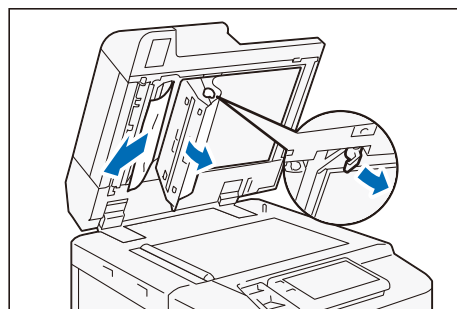

Transfer Unit


Note

- Before pulling out the Transfer Unit, check the screen display for any remaining paper in the left and right covers of the machine, Paper Tray 5 (Bypass), Exit, or optional High Capacity Feeder and Finisher. If the Transfer Unit is pulled out while paper is remaining in any of these locations, the paper may become torn.
- Do not touch locations that are not mentioned in the steps. The inside of the machine may become stained, and smears may appear on the printed output.


Warning

The Fusing Unit is hot. It may cause burn injury. Do not touch this unit.

1. Open the Front Cover.

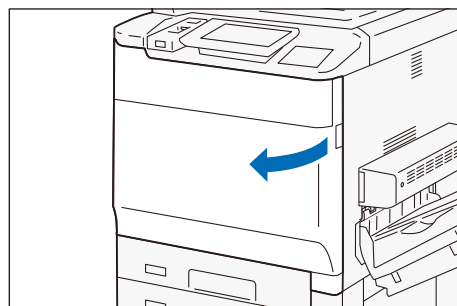


2. Turn the handle [2] of the Transfer Unit to the right until it becomes horizontal (①) and pull the Transfer Unit out to the front until it stops (②).

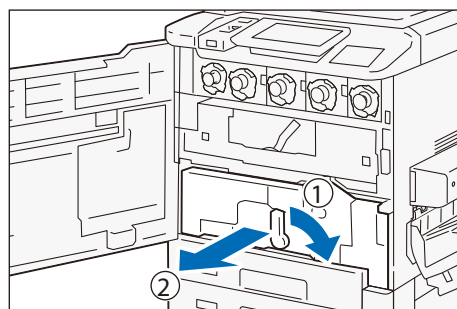

3. Slowly pull out the paper in the arrow direction and remove it.

Note

- When the paper is torn, confirm that no paper pieces remain.
- Do not push the paper in the direction opposite to the arrow and/or pull it to the front.

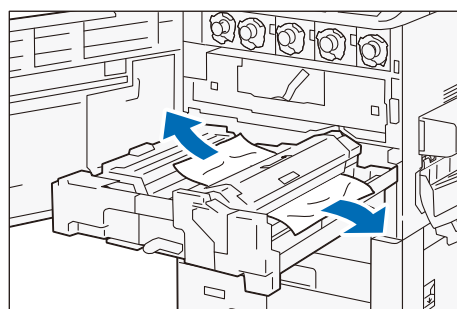

4. Perform the following operation according to the instructions displayed on the screen.

[2a]

- 1) Open the handle [2a] and remove the jammed paper.



Note

If you cannot check the paper, you may be able to check it if looking into it from underneath.

- 2) Return the handle [2a].

[2b], [2c]




- 1) Open the handle [2b] to open the handle [2c] and remove the jammed paper.

- 2) Return the handle [2b] and handle [2c].

[2d]

- 1) Open the handle [2d] down and remove the jammed paper.

- 2) Return the handle [2d].

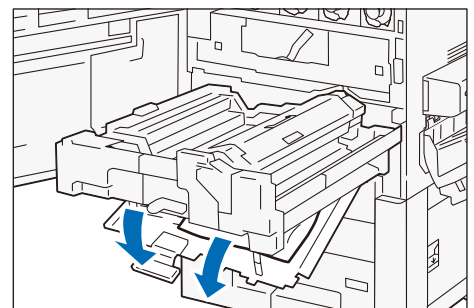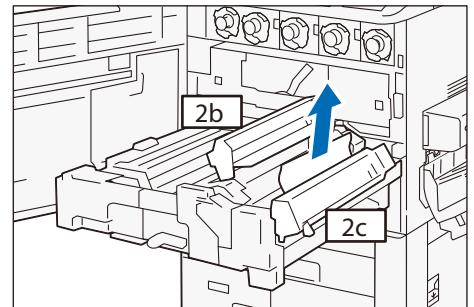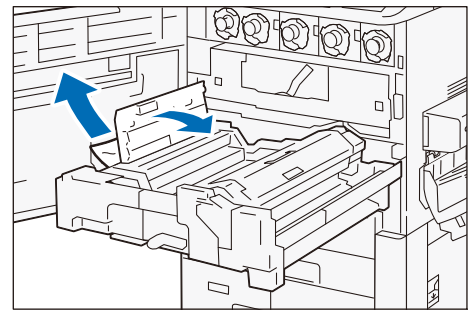


5. Push the Transfer Unit to the rearmost position and turn the handle [2] to the left.
6. Close the Front Cover.

Long paper

When paper remains on the Paper Tray 5 (Bypass) of High Capacity Feeder

1. Open the Upper Cover of the Paper Tray 5 (Bypass) and remove the jammed paper.

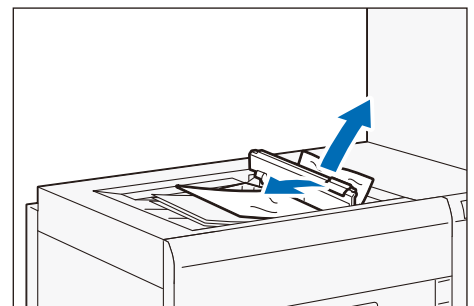



When paper is jammed between the right cover of the High Capacity Feeder and the machine



Note

- Open the right cover and remove the jammed paper. Do not remove the jammed paper from the machine side.
- Do not pull out the Transfer Unit of the machine. Otherwise, the jammed paper is torn and unable to be removed.

- 1. Open the handle [1a] in the right cover to the right.**
- 2. Cut the paper.**
- 3. Turn the knob [1c] to the right and remove the jammed paper (trail edge).**
- 4. Open the handle [1d] upward.**
- 5. Turn the knob [1c] to the right and remove the jammed paper (lead edge).**

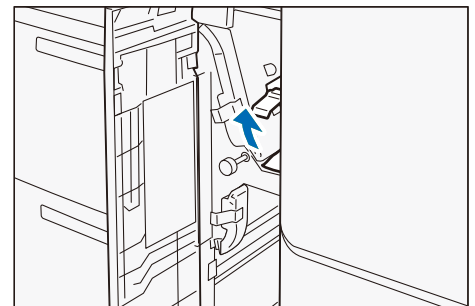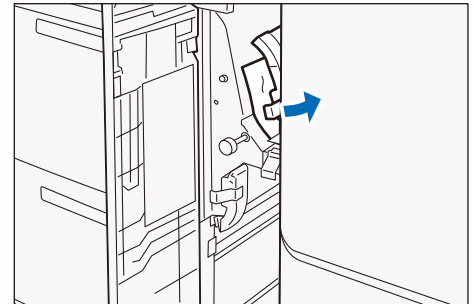

When paper is jammed in delivery unit



Note

When long paper is jammed, the error indicator and/or message displayed on the details screen may be different from the actual jam state. For this reason, make sure to perform paper jam processing on all the devices in which paper may remain.

- 1. When paper is jammed in multiple optional units, open the cover of all the units installed to the front side of the jammed locations.**
- 2. Open the handles in the paper feeding path.**
- 3. Remove jammed paper from each unit.**
Cut paper if necessary and remove paper from multiple locations.



Refer

For handling of paper jam in each unit, refer to "Reference Guide - Optional Units".

5 Appendix

5.1 Main Specifications

This section lists the main specifications of the machine. Note that the specifications and the appearance of the product may change without prior notice.


Note






- The specifications are not intended to guarantee the image quality performance and feeding performance of all papers. Use of our brand paper is recommended. To use other paper, contact your local representative.
- Wireless Network Kit (optional) is sold separately. It has obtained certification separately from the main unit.
- Certified model name of Wireless Network Kit (optional): Titan2020
- Certified model name of FAX (optional): FX2A-FAX


Refer

- For specifications of optional units, refer to the chapter of the concerned unit in "Reference Guide - Optional Units".
- For specifications of the print server, refer to the manual supplied with the print server.

Basic Specifications/Print Function

Item	Specification
Type	Console
Color capability	Full color
Printing resolution	2,400 x 2,400 dpi
Halftone/printable colors	256 halftones for each color (16,700,000 colors)
Warm-up time	Embedded Plug-ins / Custom Services When enabled: 36 seconds or less (23 degrees Celsius room temperature), When disabled: 30 seconds or less (23 degrees Celsius room temperature)  Note It is enabled upon shipment from the factory.

Item	Specification		
Continuous print speed (pages/minute)	Paper size	A4	A3
	C810	81	42
	C750	75	37
	C650	65	34
	<div> Note</div> <div>When continuous single side printing of same document, 52 to 128 g/m² (color), 52 to 176 g/m² (monochrome), uncoated. The continuous print speed may be lowered according to the data output conditions, auto adjustment of image quality, job with mixed paper sizes and/or paper types, switch of the paper feed tray, and paper output for long paper.</div>		
Paper size			
Trays 1 and 2	Standard size	Max: A3, 11 x 17", Min: A5	
	Custom Size	100 x 148 mm to 330 x 488 mm	
Trays 3 and 4	Standard size	Max: A4, Letter, Min: JIS B5	
Tray 5 (Bypass)	Standard size	Max: A3, 11 x 17", Min: A6	
	Custom Size	100 x 148 mm to 330 x 1,300 mm	
	<div> Note</div> <div><ul style="list-style-type: none">• The non-standard paper sizes refer to those when the standard Paper Tray 5 (Bypass) or optional bypass tray for long paper is directly connected to the main unit (including when High Capacity Feeder B1 is connected).• Automatic 2 sided printing is available up to 330 x 762 mm.</div>		
Paper Tray Capacity			
Maximum (sheets)	7,360 (Standard + High Capacity Feeder C3-DS)		
	<div> Note</div> <div>This value applies if 80 g/m² paper is used.</div>		
Power supply	AC 220 to 240 V ± 10%, 10 A, 50/60 Hz common		
Maximum power consumption	2.4 kW Sleep Mode: 0.5 W, Low Power Mode: 150 W, Ready Mode: 193 W		
Dimensions (mm)	Width 780 x Depth 793 x Height 1,154		
	<div> Note</div> <div>The size is the one when the Paper Tray 5 (Bypass) is closed and the delivery option is not connected.</div>		
Weight (kg)	246		
	<div> Note</div> <div>Weight not including the Toner Cartridges and Top Output Trays.</div>		

Item	Specification
Installation space (mm)	Width 1,759 x Depth 1,791
	 Note Space requirement (of the minimum configuration) when the Catch Tray is installed to the main unit and the Paper Tray 5 (Bypass) is fully extended.

Copying Function



Item	Specification	
Scan resolution	600 x 600 dpi	
Printing Resolution	2,400 x 2,400 dpi (text-photo/photo), 600 x 600 dpi (text/map)	
Halftone/printable colors	256 halftones for each color (16,700,000 colors)	
Paper size	Standard size	Max: A3, 11 x 17", Min: A6
	Custom Size	100 x 148 mm to 330 x 488 mm
First copy output time	Monochrome	4.1 seconds (A4/Monochrome priority mode)
	Color	5.4 seconds (A4/Color priority mode)

Scan Function


Item	Specification
Type	Color Scanner
Original Size	Same as the Basic Specifications/Copy Function
Scan resolution (dpi)	600 x 600, 400 x 400, 300 x 300, 200 x 200
Scan Speed	Same as the "Scan Speed" of the Duplex Automatic Document Feeder
Scanning method	[Scan to Folder] (TWAIN Interface support), [Scan (PC)], [Email]

Fax Function (optional)


Item	Specification
Original Size	Max: A3, 11 x 17", long document (max: 600 mm)
Recording paper size	Max: A3, 11 x 17", Min: A5

Item	Specification
Transmission time	2 seconds or more but below 3 seconds  Note When transmitting an A4 size 700-character document in the standard quality (8 x 3.85 lines/mm) and high speed mode (28.8 kbps or above: JBIG). This is only the transmission speed for image information and does not include the controlling time for the communication. Note that the actual transmission time depends on the content of documents, the machine that the recipient uses, and the status of the communication line.
Transmission mode	ITU-T G3
Applicable lines	Telephone subscriber line, PBX, fax communication network (PSTN), 3 ports maximum (G3: 3 ports)  Note A maximum of 3 lines can be connected. The number of ports indicates the number of channels that can be used for communication.

Duplex Automatic Document Feeder

Item	Specification
Type	1 pass, 2 sided scanning Duplex Automatic Document Feeder
Scan Speed (when copying)(A4 single-sided, monochrome/color)	C810: 81 sheets/min, C750: 75 sheets/min, C650: 65 sheets/min
Scan Speed (when scanning)	Monochrome: 135 sheets/minute, Color: 135 sheets/minute (Single-pass duplex scanning: Monochrome 270 sheets/minute, Color 270 sheets/minute)  Note The values above apply when our standard document (A4) is saved in the folder at 200 dpi.

Offset Catch Tray/Simple Catch Tray

Item	Specification
Paper size	Max: A3, 13 x 19" (330 x 483 mm), 12.6 x 19.2" (320 x 488 mm), 330 x 660 mm Min: A6
Paper weight (g/m ²)	52 to 350
Paper Capacity (sheets)	500  Note This value applies if 80 g/m ² paper is used.

5.2 Safety Notes



Refer

Also refer to "User's Manual".

Operational Safety



Do not place objects weighing more than 80 Kg in Consumables Storage Unit. Heavy loads may deform or break them.



Do not put your weight on or lift up a door of Consumables Storage Unit. It may cause deforming or breaking it.



Do not forcibly open a door of Consumables Storage Unit. It may cause deforming or breaking it.

Machine Installation



To keep this product in a good performance and condition, always use it in the following environment:

Temperature: 10 - 32°C

Humidity: 15 - 85%

When the product is left in a chilly room and the room is rapidly warmed up by heater, dew condensation may form inside the product and cause a partial deletion on printing or scanning.

Regulation

Product Safety Certification (CB)

This product is certified by the following agency using the safety standards listed.

Agency	Standard
TUV Rheinland	IEC60950-1:ed. 2

Environment

- For environmental protection and efficient use of resources, we reuse returned consumables to make recycle parts, recycle materials or energy recovery.
- Proper disposal is required for consumables no longer needed.
Do not open consumables. Return them to your local representative.

Support

Our company will store the spare parts necessary to maintain the function of the machine for 7 years after the production termination of the machine.


Legal Notice




 




Printing certain documents may be illegal in your country. Penalties of fines or imprisonment may be imposed on those found guilty. The following are examples of items that may be illegal to copy or print in your country.

- Currency
- Banknotes and checks
- Bank and government bonds and securities
- Passports and identification cards
- Copyright material or trademarks without the consent of the owner
- Postage stamps and other negotiable instruments

This list is not inclusive and no liability is assumed for either its completeness or accuracy. In case of doubt, contact your legal counsel.



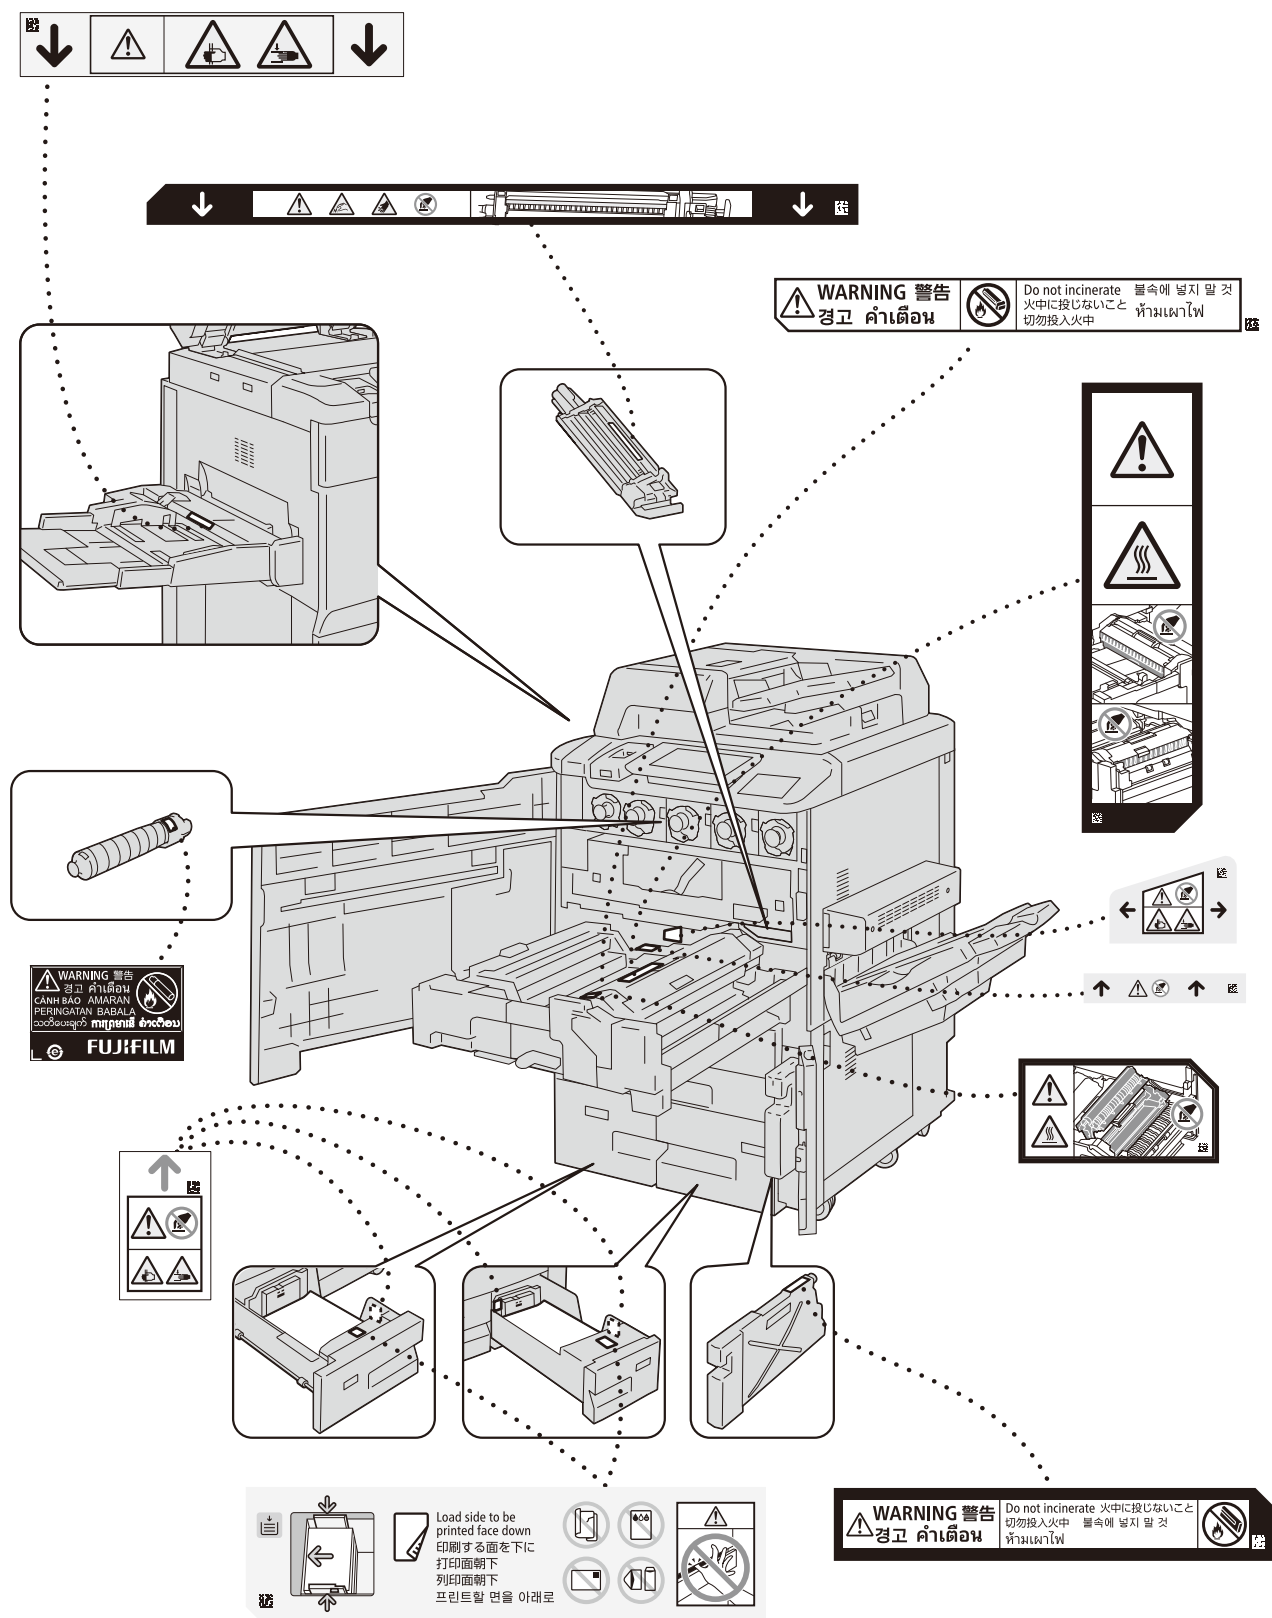

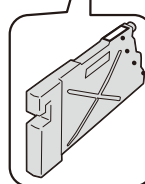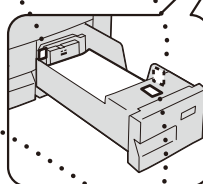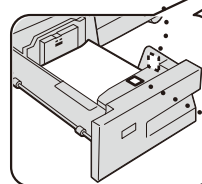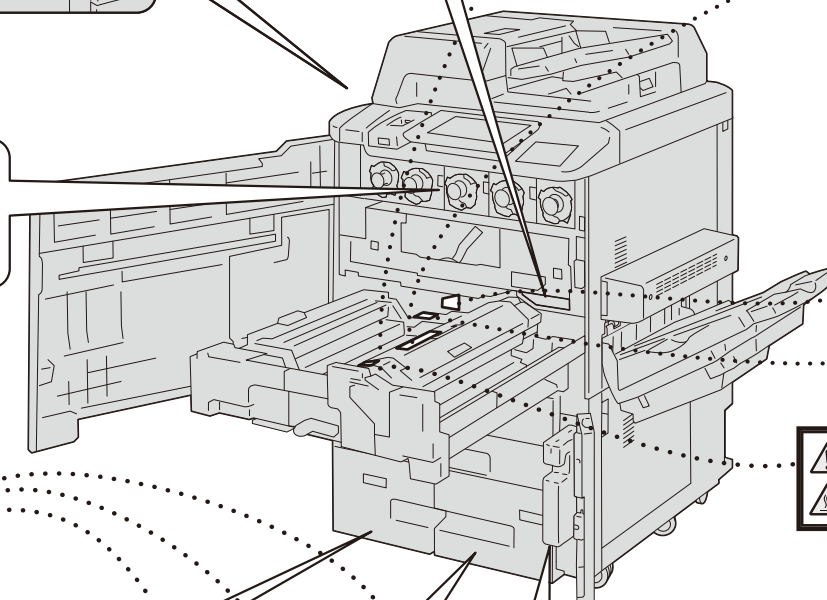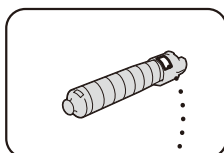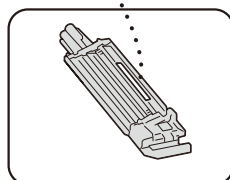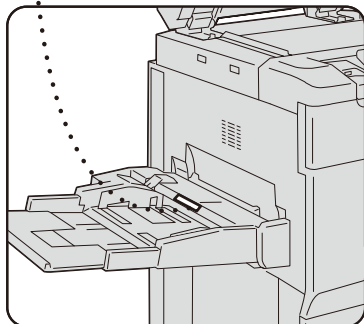


































Location of Warning and Caution Labels












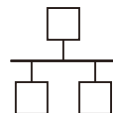
Symbols Marked on the Machine

Some of the following symbols may not be used depending on the country and/or model.

	DANGER, CAUTION, AND WARNING		DO NOT USE ENVELOPE		DO NOT COPY MONEY
	CAUTION (HEATED SURFACE)		DO NOT USE WINDOWED ENVELOPE		DO NOT THROW A TONER CARTRIDGE INTO AN OPEN FLAME
  	DO NOT INSERT A FINGER	 	DO NOT USE POSTCARDS	 	DO NOT THROW WASTE TONER CONTAINER INTO AN OPEN FLAME DO NOT THROW WASTE TRANSFER UNIT INTO AN OPEN FLAME
 	DO NOT TOUCH	 	DO NOT USE FOLDED, CREASED, OR CURLED PAPER DO NOT USE FOLDED PAPER		POWER / POWER SAVING BUTTON
	CAUTION (ELECTRIC SHOCK)	 	DO NOT USE CREASED PAPER	 	DO NOT USE CUT AND PASTED DOCUMENT DO NOT USE BACK CARBON PAPER
 	CAUTION (CUTTING EDGES)	 	DO NOT USE CURLED PAPER		DO NOT USE INK JET PRINTER PAPER
 	DO NOT INSERT A FINGER	 	DO NOT USE THIN DOCUMENT	 	DIRT ON THE OUTPUT DOCUMENT MIXED SIZE DOCUMENT
	DO NOT USE PAPER WITH STAPLES OR CLIPS	 	DO NOT USE TRANSPARENCY FILMS FOR FULL COLOR DO NOT USE TORN PAPER	 	COATED PAPER LONG PAPER

	CAUTION (HEAVY OBJECT) RISK TO SINGLE WORKER
	CLEANING OF SCANNER
	FACE PRINT SURFACE DOWN

	PAPER JAM
	GENERAL INSTRUCTIONS
	FACE PRINT SURFACE UP

	USB TERMINAL MARKING
	LAN TERMINAL MARKING

New Zealand FAX modem statements

General

"The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services"

"This equipment does not fully meet Spark's impedance requirements. Performance limitations may occur when used in conjunction with some parts of the network. Telecom will accept no responsibility should difficulties arise in such circumstances."

"This equipment shall not be set up to make automatic calls to the Telecom '111' Emergency Service."

"If a charge for local calls is unacceptable, the 'Dial' button should NOT be used for local calls. Only the 7-digits of the local number should be dialled from your telephone. DO NOT dial the area code digit or the '0' prefix."

"This equipment may not provide for the effective hand-over of a call to another equipment connected to the same line."

Important Notice

"Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use."

"Some parameters required for compliance with Spark's Telepermit requirements are dependent on the equipment (PC) associated with this equipment. The associated equipment shall be set to operate within the following limits for compliance with Telecom's Specification:

There shall be no more than 10 call attempts to the same number within any 30-minute period for any single manual call initiation, and the equipment shall go on-hook for a period of not less than 30 seconds between the end of one attempt and the beginning of the next attempt.

Where automatic calls are made to different numbers, the equipment shall go on-line for a period of not less than 5 seconds between the end of one attempt and the beginning of the next attempt.

The equipment shall be set to ensure that calls are answered between 3 and 30 seconds of receipt of ringing."

"All persons using this device for recording telephone conversations shall comply with New Zealand law. This requires that at least one party to the conversation is to be aware that it is being recorded. In addition, the Principles enumerated in the Privacy Act of 1993 shall be complied with in respect to the nature of the personal information collected, the purpose for its collection, how it is used and what is disclosed to any other party."